

Instruction for Rescue Operations during emergency !



Follow instructions as advised below:

1. Shut Down the Power from Machine Room
2. Ensure the Car is at standstill
3. Pull the handle as shown above, to release the brake mechanically
4. Keep the brake release handle in pulled condition,
if the lift is not in operation.
5. The lift will move towards,
Up direction if the Car is empty
Down direction if the Car is fully loaded ... then use the key for manual